



My doorbell has stopped working. I've checked and replaced the batteries, but it still refuses to work.

---

Try performing a factory reset. To do this, remove one battery (or turn off the power to a plug-in doorbell). Press and hold the settings button  whilst replacing the battery (or turning on the power). An Amber light will flash, either from the small LED indicator on the side of the doorbell, or from the Halo Light (Depending on product type). After this, you'll have to re-link your push button or other devices such as wireless motion sensors and/or wireless door and window sensors.

How do I link additional Honeywell Home wireless push buttons?

---

Press and hold the settings button  on the doorbell until an amber light flashes, either from the small LED indicator on the side of the doorbell, or from the Halo Light (Depending on product type). Press the push button. Doorbell will play a melody. Your push button is now linked.